HOME
DECORATORS
C O L L E C T I O N

BF-25132 KIDS ART STATION 33″HX28″W

INV#16268

ASSEMBLY INSTRUCTIONS

Made In China

THIS ITEM MUST BE ASSEMBLED BY AN ADULT

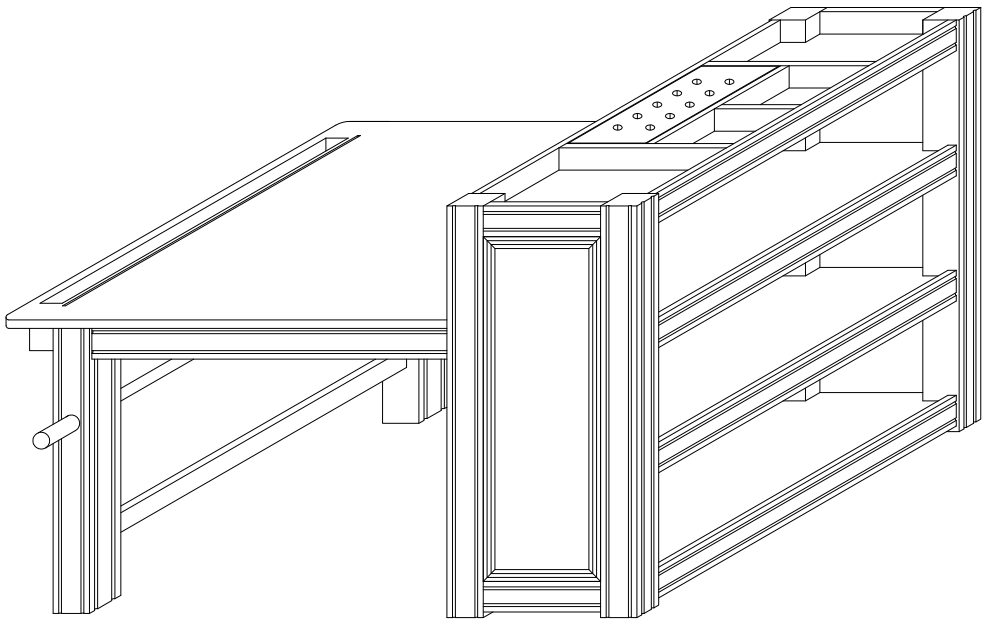

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  LEFT FOOT-1PC	C RIGHT FOOT-1PC
D PAPER ROLLER-1PC	E PANEL-1PC	F 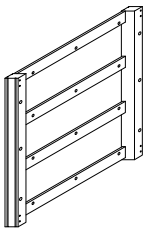 LEFT SIDE PANEL-1PC
G 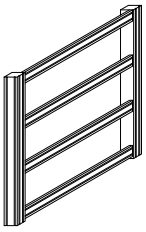 RIGHT SIDE PANEL-1PC	H 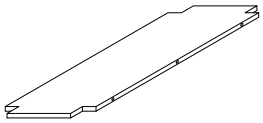 ACROSS PANELS-2PCS	I  STAND PANELS-2PCS
J 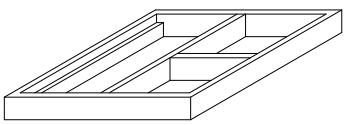 PALLET-1PC	K  PANEL-1PC	L 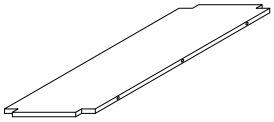 MIDDLE ACROSS PANELS-2PCS

M  PANELS-4PCS	N  ROD HEAD-1PC	O CAM-TOOL-1PC
P 8mm × 1-1/4"  SCREWS-2PCS	Q 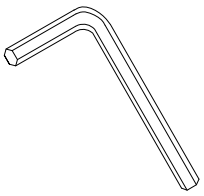 ALLEN WRENCH-1PC	R 13mm × 2"  BOLTS-4PCS
S 13mm × 1-1/4"  BOLTS-3PCS	T  DOWELS-18PCS	U  WASHERS-7PCS
V 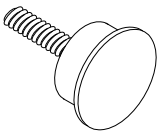 FEET-6PCS	W  CAM-BOLTS-36PCS	X CAM-LOCKS-36PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

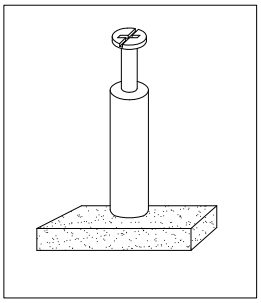

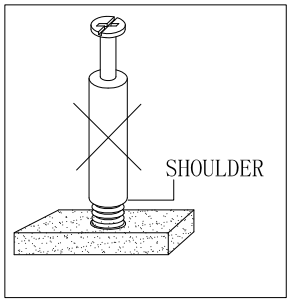

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

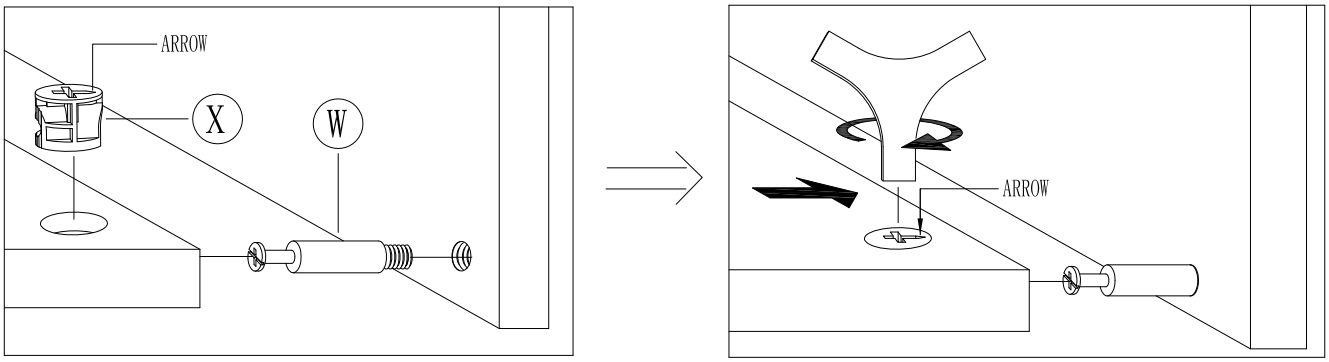

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

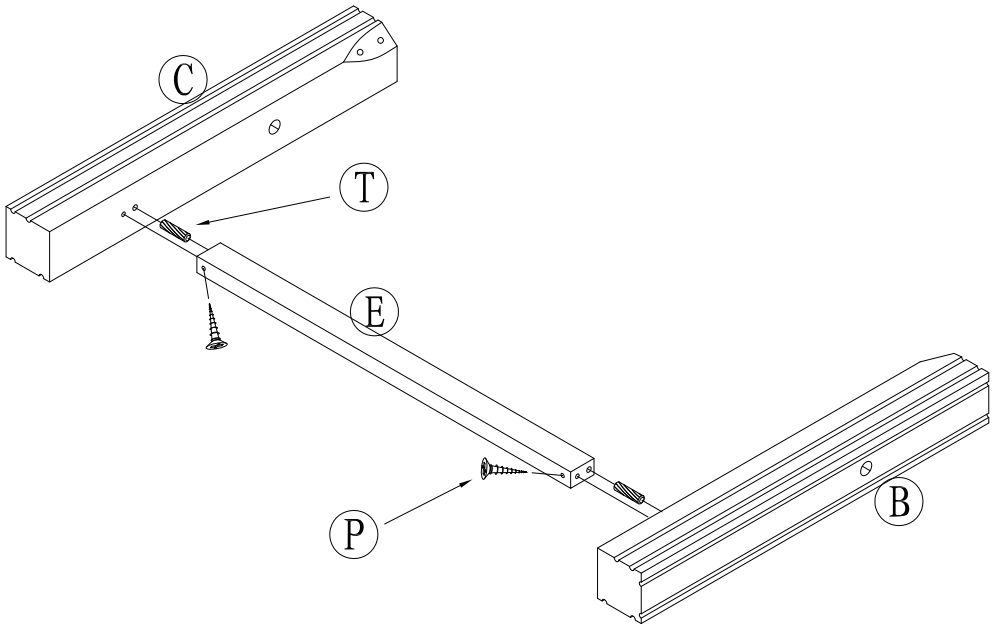

1). ASSEMBLE THE FOOT(B/C).

- INSERT 2 DOWELS(T) INTO THE HOLES IN THE PANEL(E).
- ATTACH THE FOOT(B/C) TO PANEL(E) USING 2 SCREWS(P).

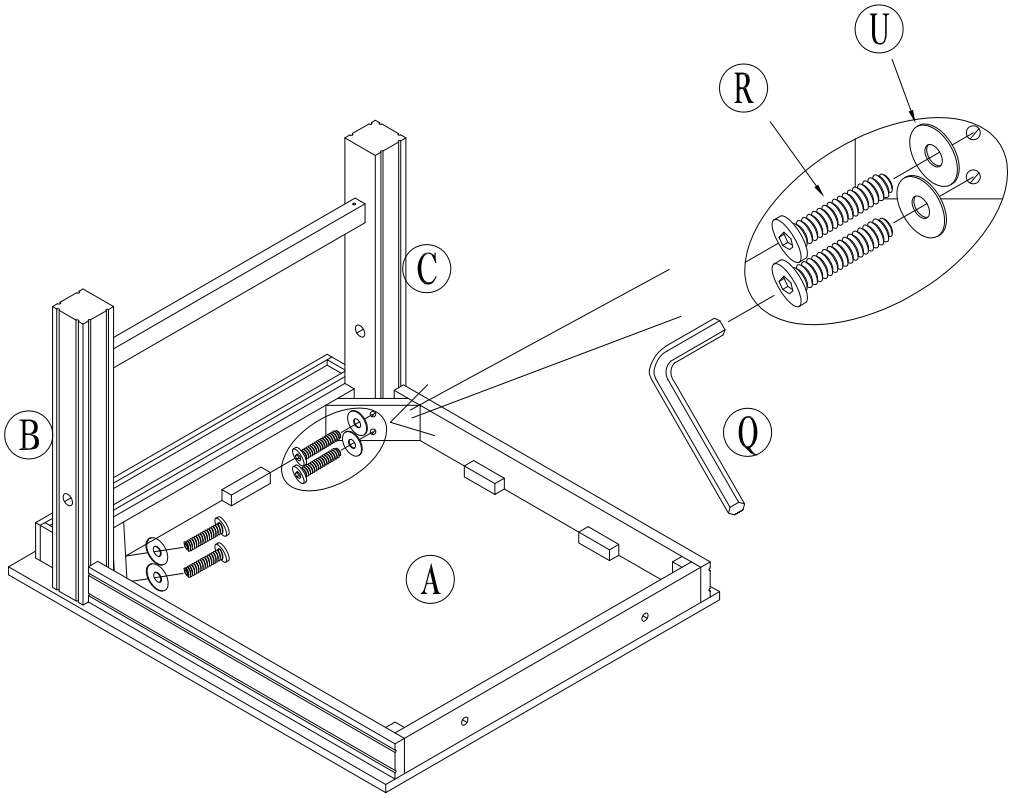

2). ASSEMBLE THE FOOT(B/C).

- ATTACH THE FOOT(B/C) TO TOP PANEL(A) USING 4 BOLTS(R) AND 4 WASHERS(U).

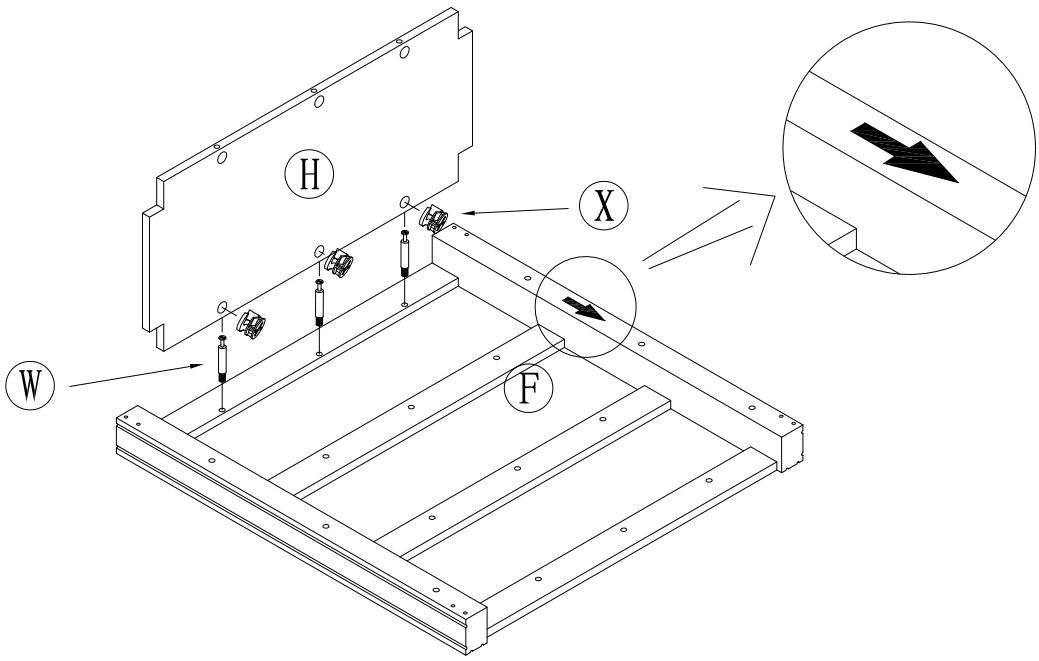

3). ASSEMBLE THE ACROSS PANEL(H).

- ROTATE 3 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE ACROSS PANEL(H) AND ATTACH USING 3 CAM-LOCKS(X).

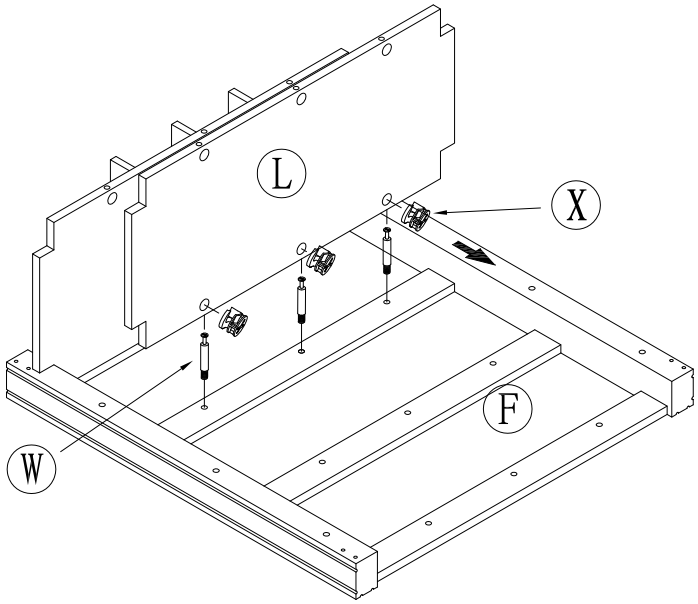

4). ASSEMBLE THE MIDDLE ACROSS PANEL(L).

- ROTATE 3 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE MIDDLE ACROSS PANEL(L) AND ATTACH USING 3 CAM-LOCKS(X).

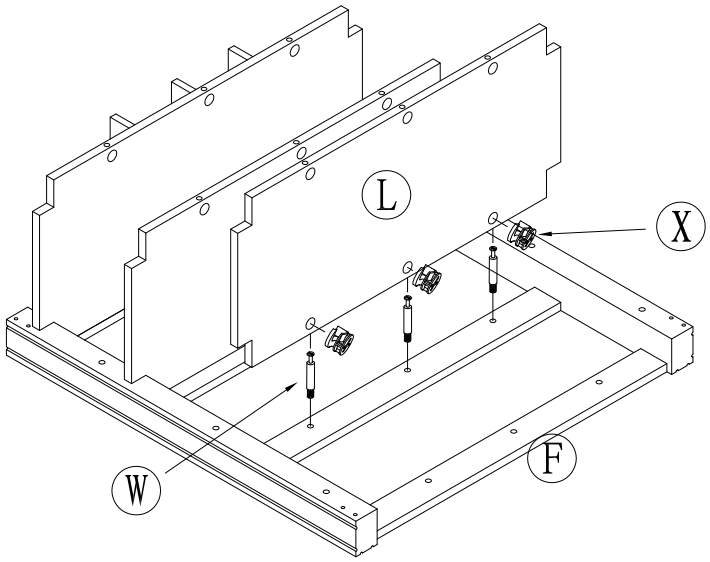

5). ASSEMBLE THE MIDDLE ACROSS PANEL(L).

- ROTATE 3 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE MIDDLE ACROSS PANEL(L) AND ATTACH USING 3 CAM-LOCKS(X).

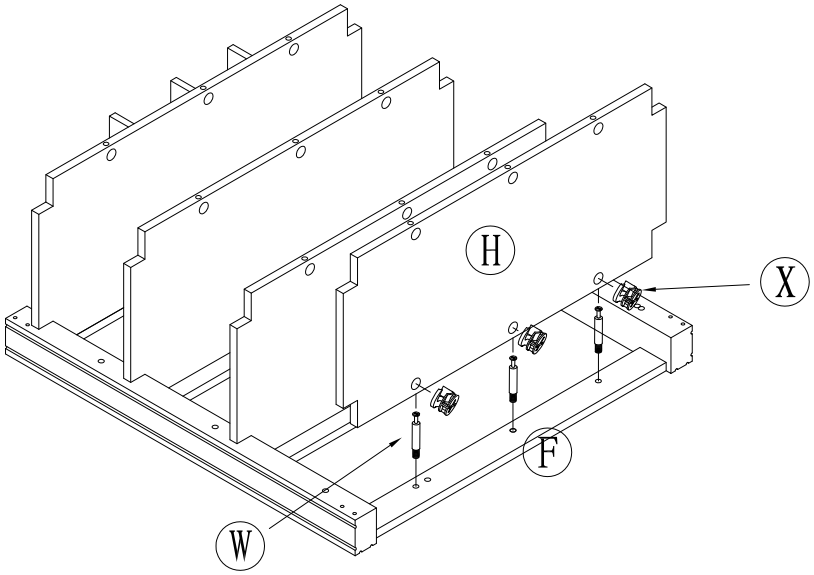

6). ASSEMBLE THE ACROSS PANEL(H).

- ROTATE 3 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE ACROSS PANEL(H) AND ATTACH USING 3 CAM-LOCKS(X).

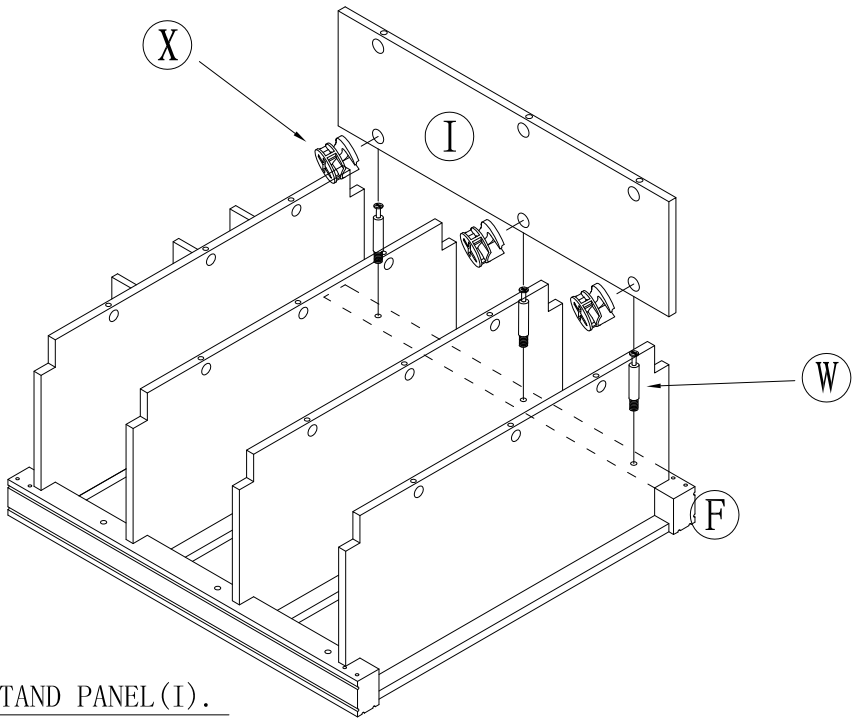

7). ASSEMBLE THE STAND PANEL(I).

- ROTATE 3 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE STAND PANEL(I) AND ATTACH USING 3 CAM-LOCKS(X).

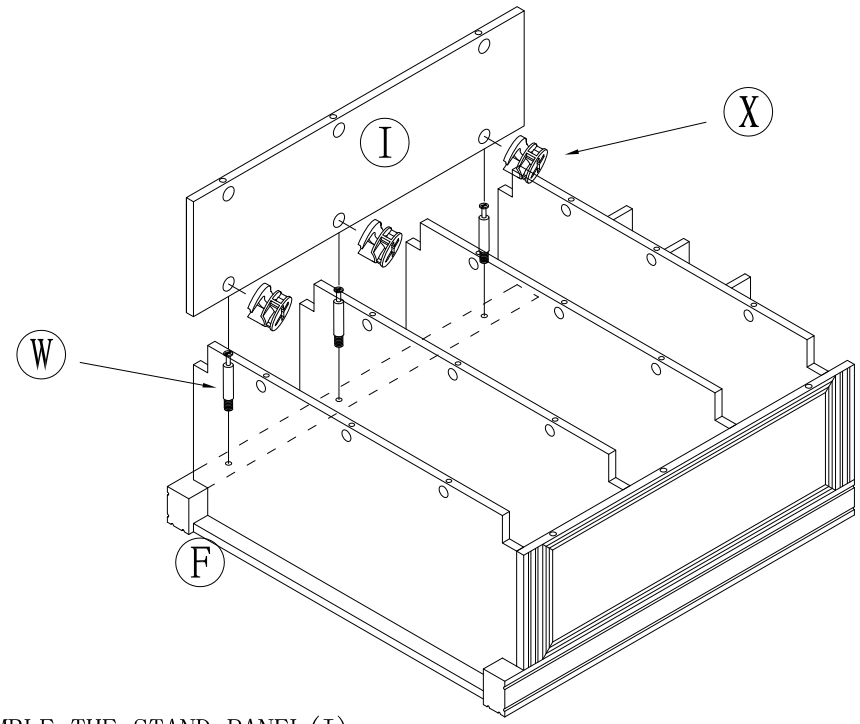

8). ASSEMBLE THE STAND PANEL(I).

- ROTATE 3 CAM-BOLTS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE STAND PANEL(I) AND ATTACH USING 3 CAM-LOCKS(X).

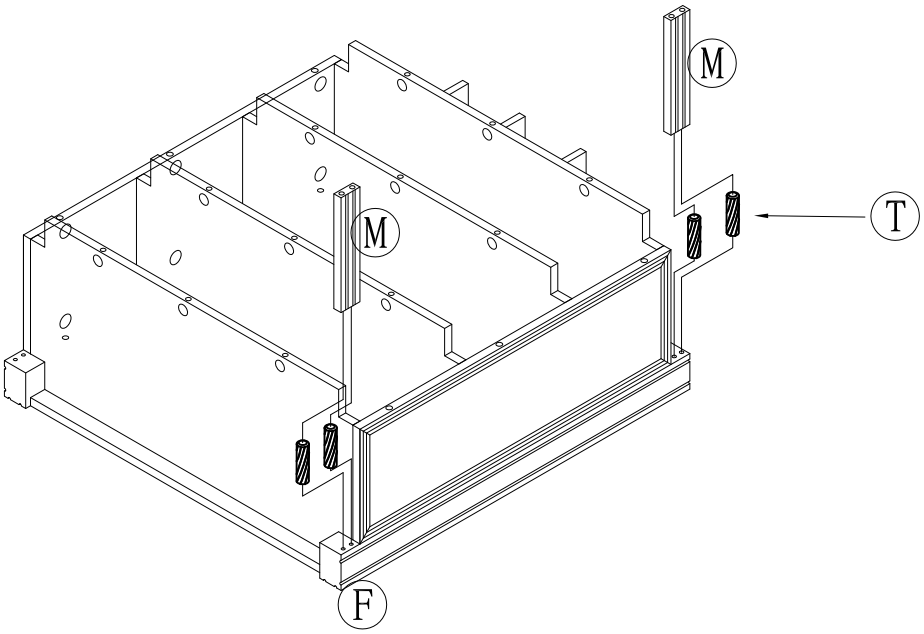

9). ASSEMBLE THE PANELS(M).

- INSERT 4 DOWELS(T) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- ATTACH THE PANELS(M) TO LEFT SIDE PANEL(F).

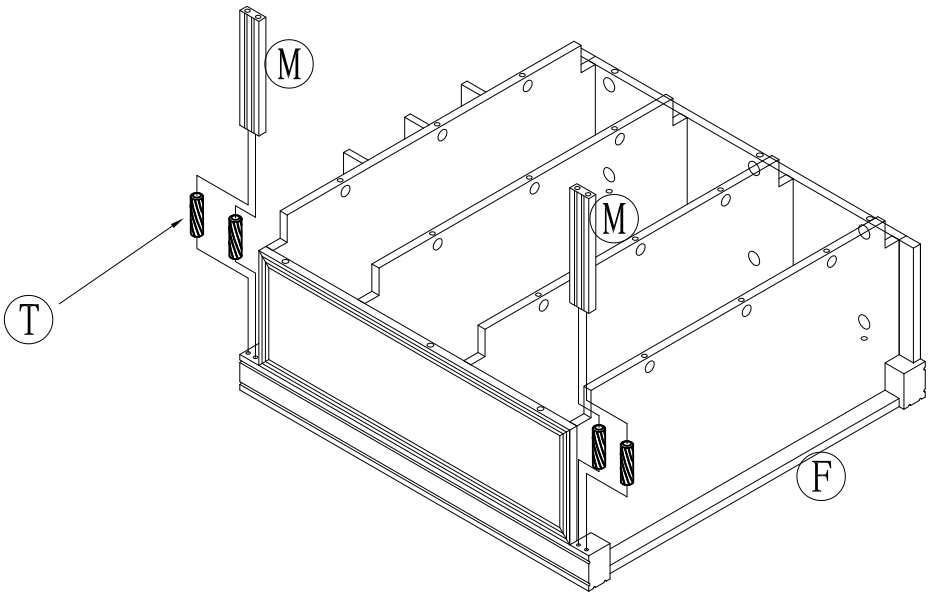

10). ASSEMBLE THE PANELS(M).

- INSERT 4 DOWELS(T) INTO THE HOLES IN THE LEFT SIDE PANEL(F).
- ATTACH THE PANELS(M) TO LEFT SIDE PANEL(F).

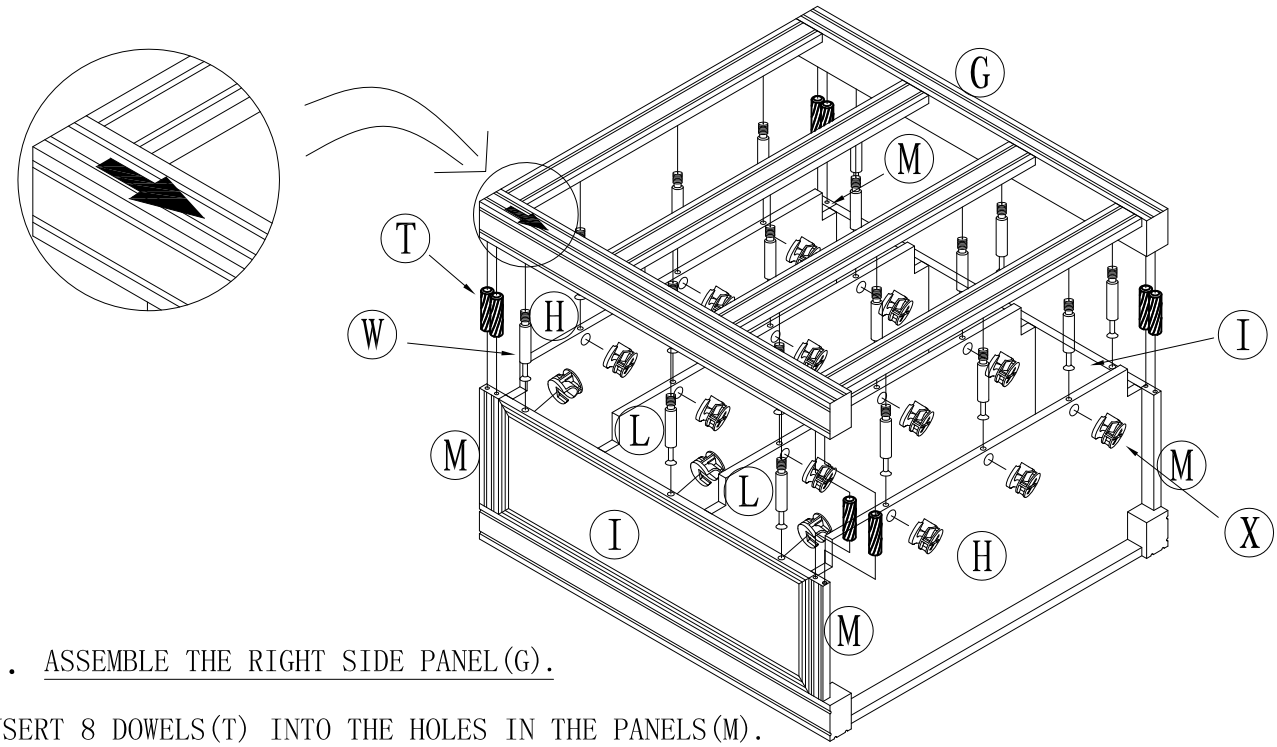

11). ASSEMBLE THE RIGHT SIDE PANEL(G).

- INSERT 8 DOWELS(T) INTO THE HOLES IN THE PANELS(M).
- ROTATE 18 CAM-BOLTS(W) INTO THE HOLES IN THE RIGHT SIDE PANEL(G).
- PLACE CAM-BOLTS(W) INTO THE HOLES IN THE PANELS(I/H/L) AND ATTACH USING 18 CAM-LOCKS(X).

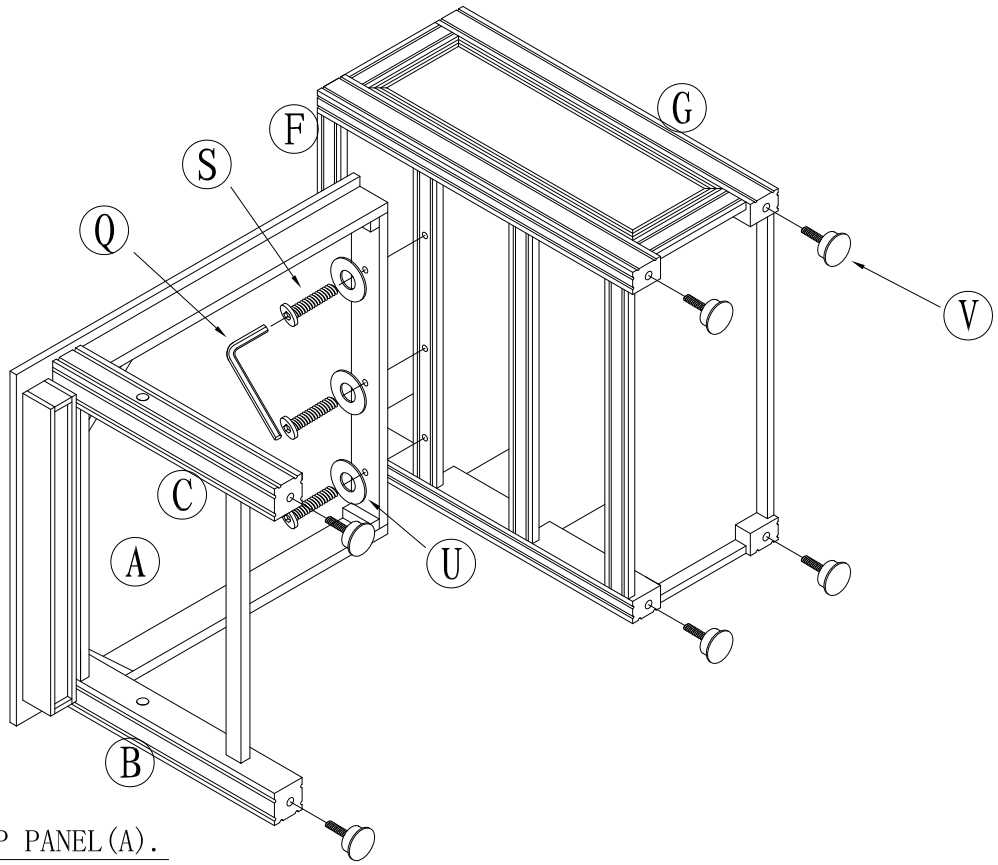

12). ASSEMBLE THE TOP PANEL(A).

- ATTACH THE TOP PANEL(A) TO LEFT SIDE PANEL(F) USING 3 BOLTS(S) AND 3 WASHERS(U).
- ROTATE 6 FEET(V) INTO THE HOLES IN THE PANEL(B/C/F/G).

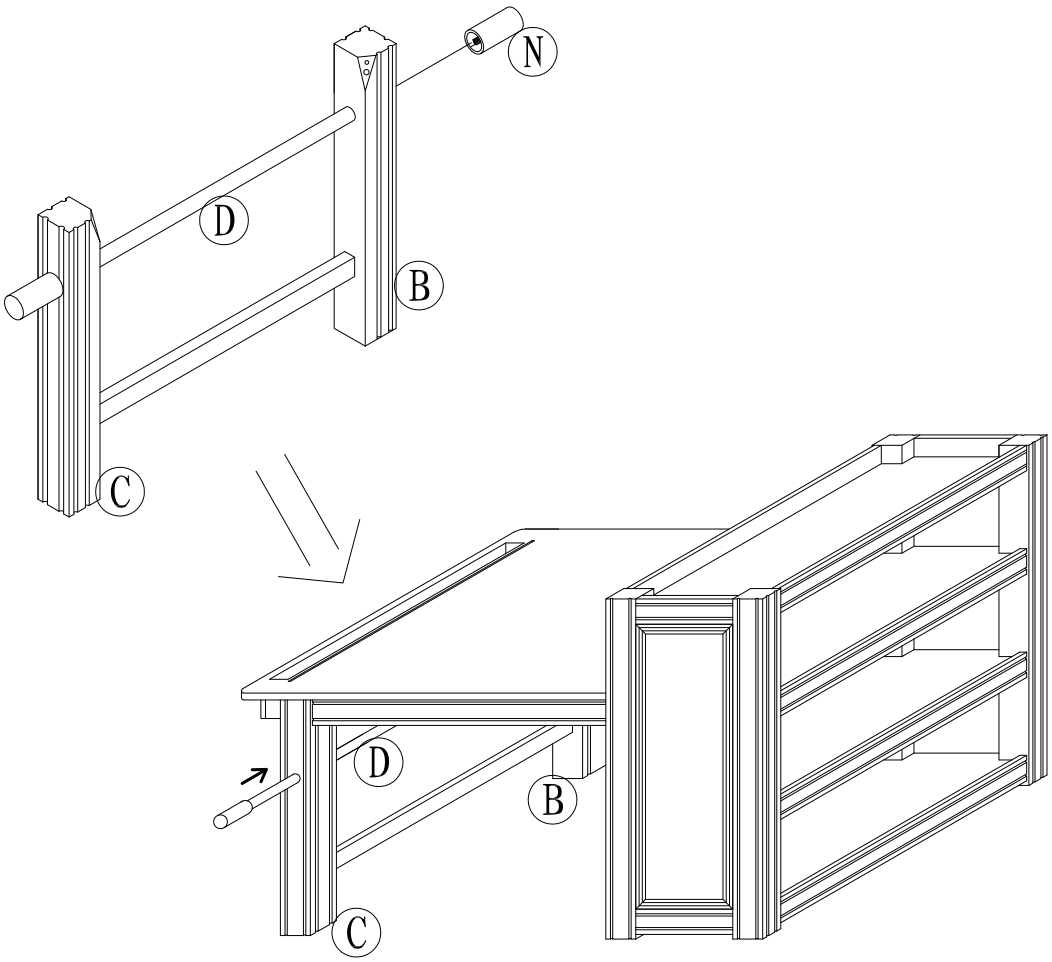

13). ASSEMBLE THE PAPER ROLLER(D).

- INSERT THE PAPER ROLLER(D) INTO THE HOLES IN THE FOOT(B/C).
- ROTATE THE PAPER ROLLET(D) INTO THE HOLES IN THE ROD HEAD(N).

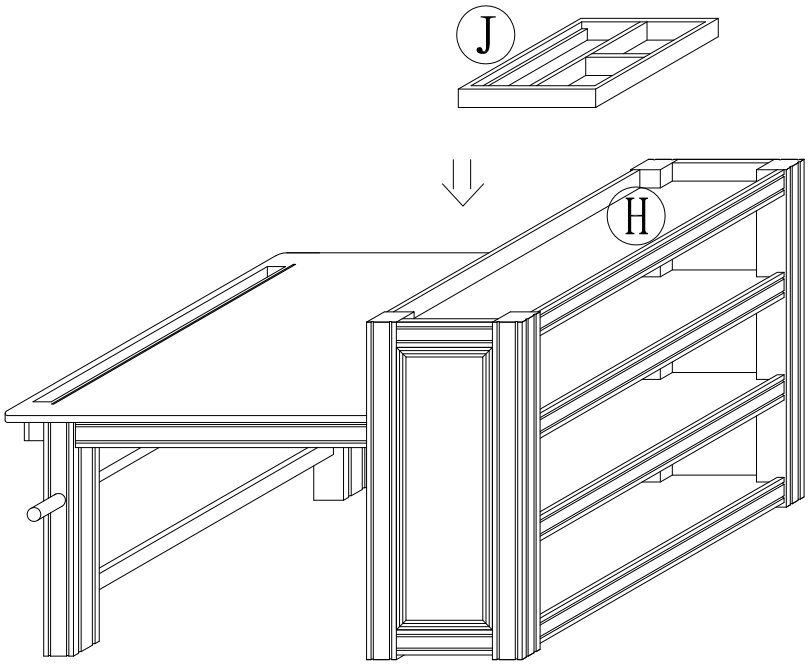

14). ASSEMBLE THE PALLET(J).

- PUT THE PALLET(J) ON THE ACROSS PANEL(H).

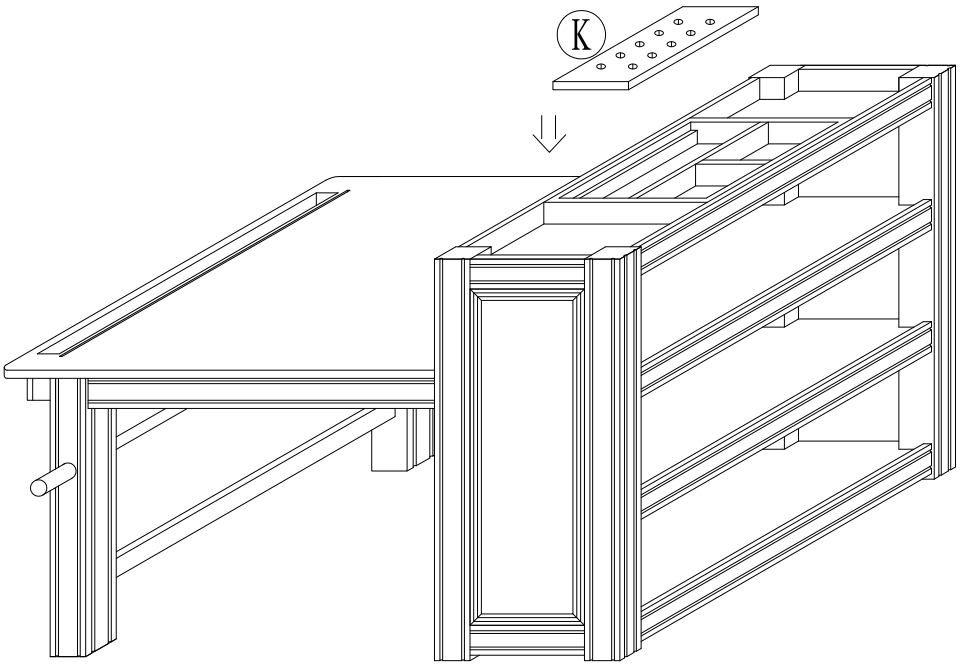

15). ASSEMBLE THE PANEL(K).

- PUT THE PANEL(K) ON THE PALLET(J).